



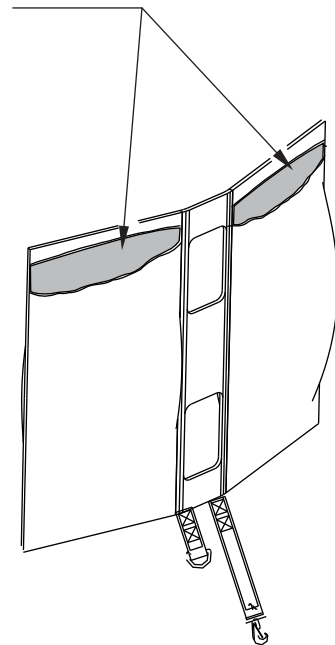

ASSEMBLY INSTRUCTIONS FOR 10B1605 SADDLE ANCHOR BAG

1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify Kwik Goal immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
2. Read through entire instruction before beginning assembly and installation.
3. Refer to Anchor Weight Requirements to determine the appropriate number of anchor bags for goal.
4. Fill each anchor bag with a minimum of 40 lbs. of sand or small stone.
(20 lbs. in each pocket)
5. Use a cable tie to keep zipper closed.

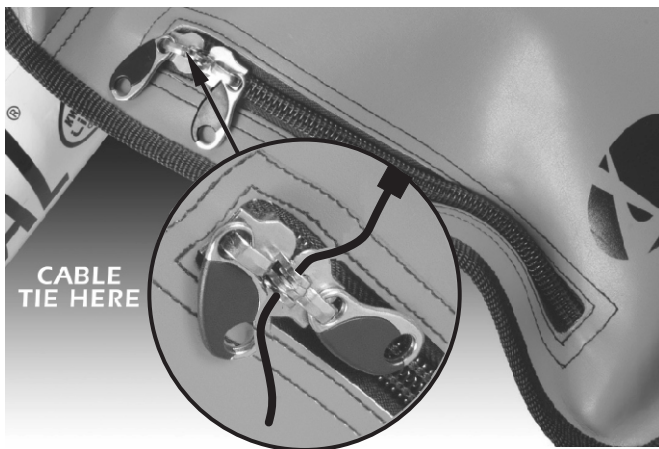

US Pat# 7,341,531 B2

CAUTION

All sports equipment must be anchored at all time. Sports equipment must have the proper amount of counterbalance weight and be attached in locations stated by Kwik Goal instructions. Do not move sport equipment with counterbalance weight attached. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use any sports equipment during the threat of high winds. Sports equipment should be checked for safety on regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.




⚠ WARNING

IMPORTANT GOAL SAFETY INSTRUCTIONS
READ CAREFULLY

1. Check for structural integrity and proper connecting hardware before every use. Replace damaged or missing parts or fasteners immediately.
2. Safety/Warning labels must be clearly visible.
3. Securely anchor movable soccer goals at ALL times.
4. Always instruct players, managers, coaches, trainers, teachers, maintenance workers and all other personnel who might come in contact with the goal, on the safe handling of and potential dangers associated with movable soccer goals.
5. Always exercise extreme caution when moving goals and provide adequate manpower to move goals of varied sizes and weights. Movable soccer goals should only be moved by authorized personnel.
6. NEVER allow anyone to climb on the net or goal framework.
7. Movable soccer goals should only be used on LEVEL fields, NEVER on a slope or hill area.
8. Remove nets when goals are not in use.
9. Most of the tip-over injuries occurred when goals were unattended. Anchor or chain one goal to another or to nearby fence posts, dugouts, or any other similar sturdy fixture when not in use. If this is not practical, store movable soccer goals in a place where children cannot have access to them.
10. Fully disassemble goals for seasonal storage.

6. Attach anchor bags as shown. For maximum effectiveness, weight should be placed as close to rear corners of goal as possible and evenly distributed between the left and right sides.

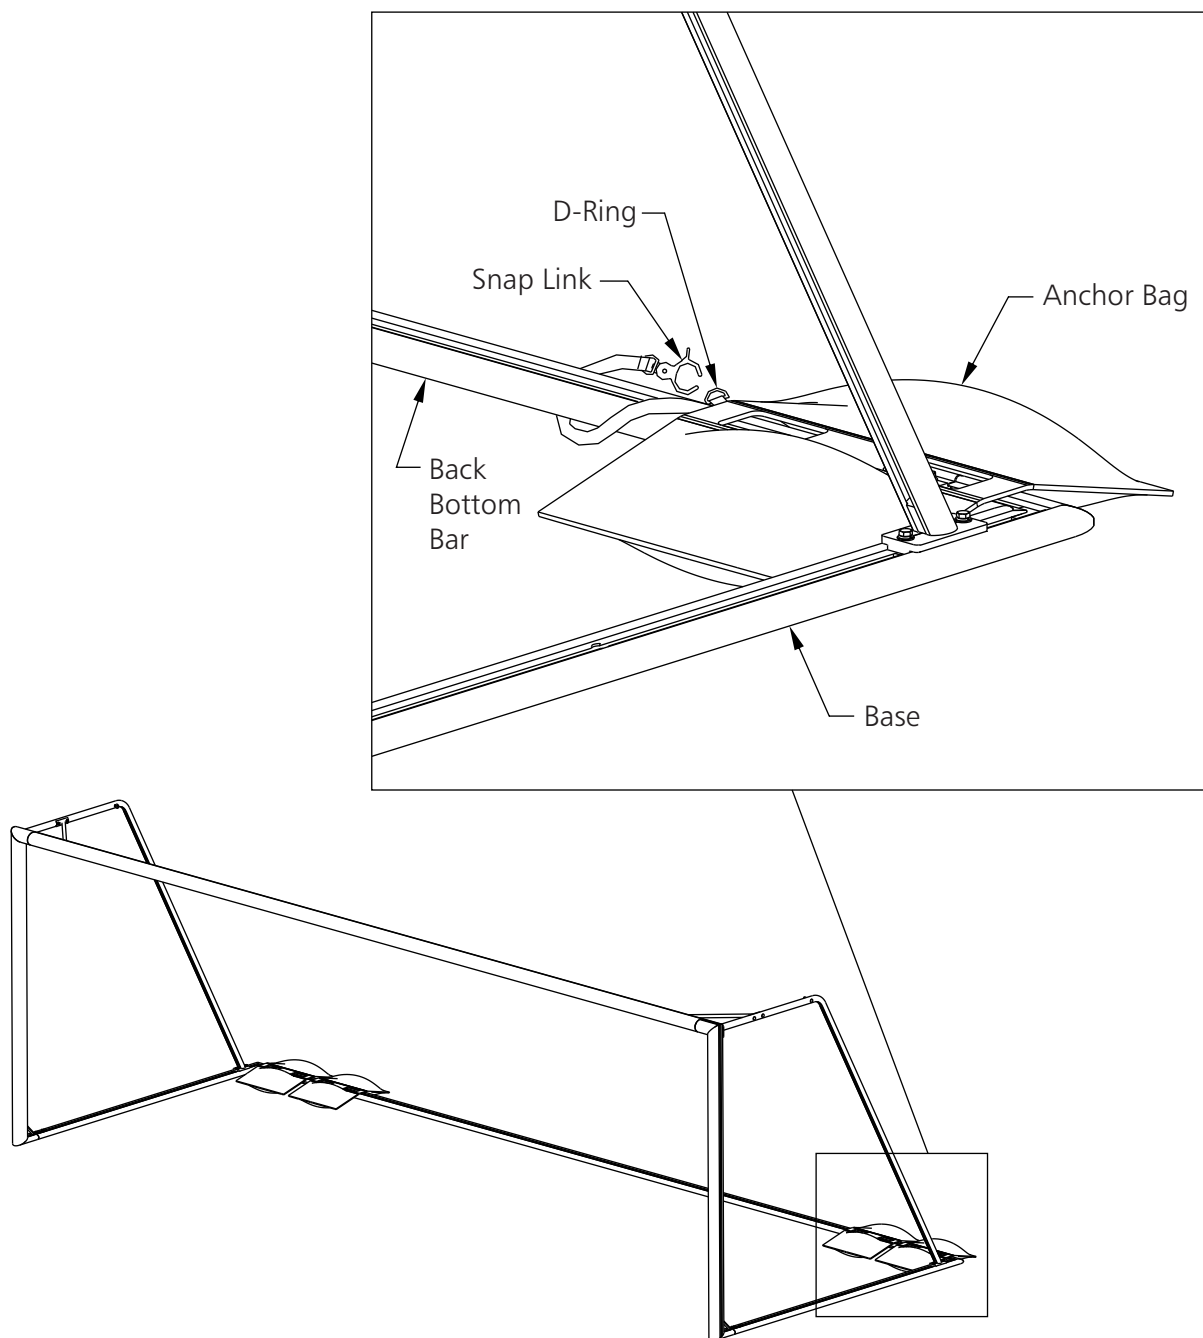

Go to Kwikgoal.com for additional product information.

*****CAUTION*****

All sports equipment must be anchored at all time. Sports equipment must have the proper amount of counterbalance weight and be attached in locations stated by Kwik Goal instructions. Do not move sport equipment with counterbalance weight attached. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use any sports equipment during the threat of high winds. Sports equipment should be checked for safety on regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.